




┌ installation & operating manual

lets protect
what's important



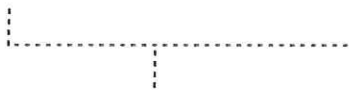


NOTES:

Getting to Know Your SpectraLight



SpectraLight units have been engineered so that the entire unit can be assembled and disassembled by hand. Please note that threaded components use EPDM and Viton O-rings and should be hand tightened only.

Industrial Grey UV Sterilizer Housing

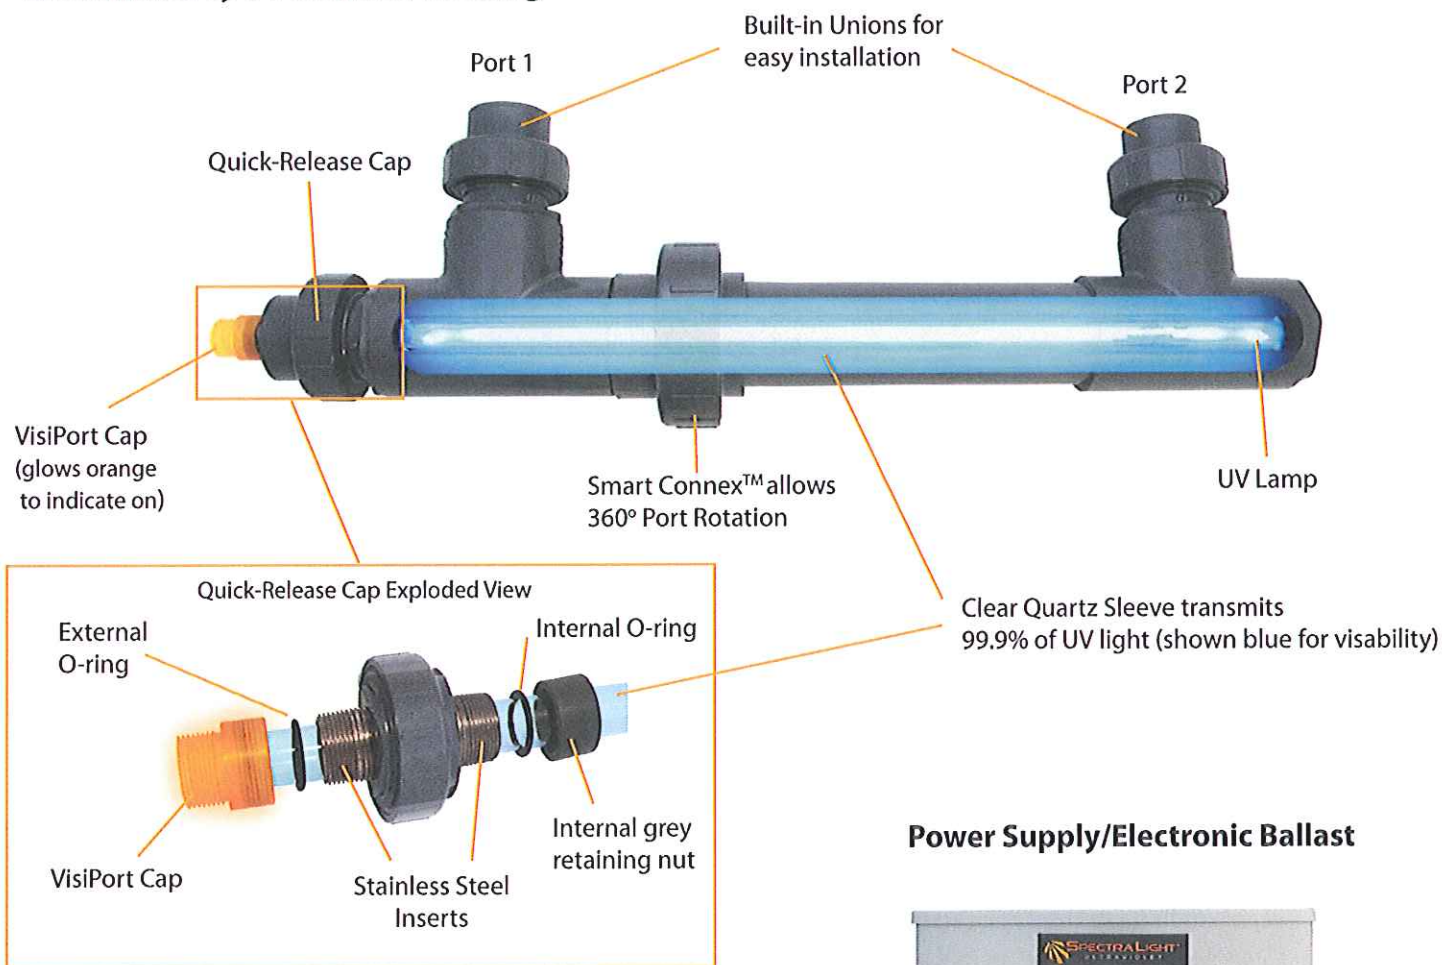

Note: Lubricate o-rings with silicone lube or water when installing or replacing a quartz sleeve

Power Supply/Electronic Ballast



SpectraLight Installation & Owner's Manual



Copyright © 2009 by SpectraLight Ultraviolet
Printed in U.S.A. 9/2009

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of SpectraLight Ultraviolet. While every precaution has been taken in the preparation of this manual, SpectraLight Ultraviolet assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information herein.

Neither SpectraLight Ultraviolet nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations of this product, or (excluding the U.S.) failure to strictly comply with SpectraLight Ultraviolet's Installation and Owner's manual.

SpectraLight Ultraviolet is a trademark of Spectra Ventures, LP.

NOTICE: The contents of this manual are subject to change without notice.

Important Safety Information

This section presents important information intended to ensure safe and effective use of this product. Read this section carefully and store it in an accessible location.

Key to Symbols

The symbols in this manual are identified by their level of importance, as defined below. Read the following carefully before handling, installing, or using this product.



Warning:

Warnings must be followed carefully to avoid serious bodily injury.



Caution:

Cautions must be observed to avoid minor injury to yourself or damage to your equipment.

Customer Service

Phone:	(512)686-0935
Email:	info@spectrauv.com
Fax:	(888)295-2024
Web:	www.spectralightuv.com

IMPORTANT SAFETY PRECAUTIONS



PLEASE READ ALL INSTRUCTIONS PRIOR TO ATTEMPTING TO INSTALL OR OPERATE THIS EQUIPMENT



WARNING

Ultraviolet light can damage your skin and eyes. Do not expose your skin or stare at an operating ultraviolet lamp when turned on outside of the ultraviolet sterilizer housing. Direct exposure to ultraviolet rays can cause eye injury, tissue damage and other health risks.

This UV sterilizer must be wired in conjunction with a properly grounded, ground fault interrupter circuit (GFI). Only a (3) three wire grounded cable, suitable for outdoor use, should be used to connect this device. If joining cables for outdoor use, a suitable watertight cable connector must be used. If an extension cord is necessary, a cord with a proper rating should be used. A cord rated for less amperes or watts than the uv sterilizer rating may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled. We recommend consulting a licensed electrician if you should have any questions.

Never attempt to repair this product yourself. Contact SpectraLight Ultraviolet for repairs.

Improper repair work can be dangerous.

Never attempt to modify this product.

Tampering with this product may result in injury or fire.

Connection to improper power source may cause fire.

If water enters the inside of quartz sleeve or if water leaks from housing, do not continue to use it. Turn off power and disconnect power immediately and contact your dealer or SpectraLight Ultraviolet.



WARNING

To avoid possible electric shock, special care should be taken when working with UV equipment.

If the unit falls into the water or becomes wet, do not touch it. You must first make sure it is unplugged or the power cord is removed from the power source. If electrical components such as the ballast, transformer or lamp should become wet, unplug it immediately. Contact SpectraLight for testing and repair.

If water should ever enter the inside of the quartz sleeve, immediately disconnect power by unplugging from the power source.

Carefully examine the unit after installation of the ultraviolet housing and prior to installation of the lamp and connection to the ballast. Do not connect to ballast, install lamp or plug in ballast if there is moisture or water outside of the UV chamber or on the inside of the quartz sleeve.

Do not operate the UV unit if it has been damaged, is leaking, is malfunctioning.

Close supervision is necessary when any electrical device is used around children.

Always unplug the unit from an outlet and disconnect power when not device is not being used, before servicing, cleaning or working on the unit. Never grasp the cord when disconnecting cord, but hold plug directly and pull to disconnect.

DO NOT use the uv sterilizer for anything other than its intended use. The use of lamps or attachments not recommended or sold by SpectraLight may be hazardous and may void warranty.

Unpacking your Unit



The following items are included for each Spectralight Ultraviolet Sterilizer. If any item is damaged, contact SpectraLight or your dealer:

- SpectraLight Grey Housing
- Power supply NEMA enclosure (may be shipped separately due to weight)
- Lamps(s) - **caution: handle lamps by the ends; do not touch lamp glass.**
- Installation and Owner's Manual (this document)

Grey Housing



Power Supply/Ballast



UV Lamp



The quartz sleeve and or UV lamp in this device may have been broken or damaged during shipment. It is very important to check the quartz sleeve for damage prior to installation or connection to electrical power. If you can hear pieces moving inside the unit when rotating unit, then it is broken. Please contact SpectraLight for instructions.


Installation of Your SpectraLight Housing



Caution: Units may be damaged in shipping. Safety first...water test the unit in accordance with the water testing section prior to inserting the lamp(s) and connecting the power supply.


Choosing your SpectraLight Housing Location

The housing should be installed in-line on the return line after the filter. Installation after the filter will ensure the water is free of debris that could reduce the UV light transmission. An optional inline automatic chlorinator can be installed to provide .5 ppm free chlorine residual (can be purchased online for approximately \$59.)

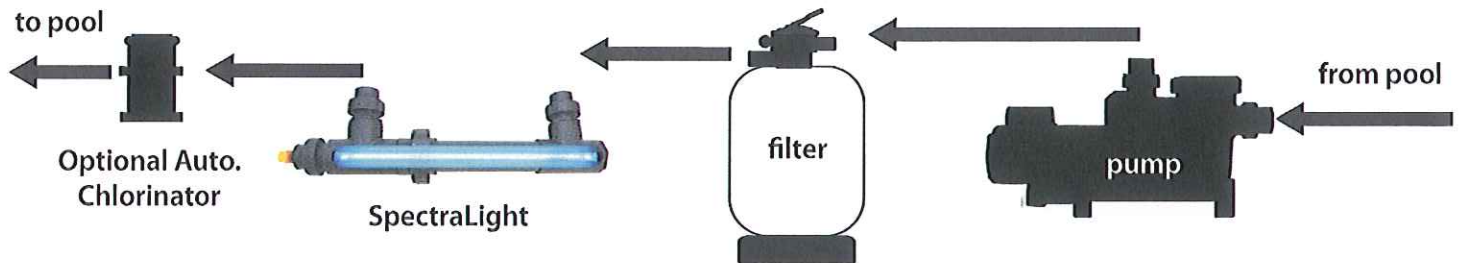

Choosing your SpectraLight Housing Orientation

Depending on the layout of your filtration equipment and space constraints, you may mount your SpectraLight in either the vertical or horizontal position. The horizontal orientation is recommended.

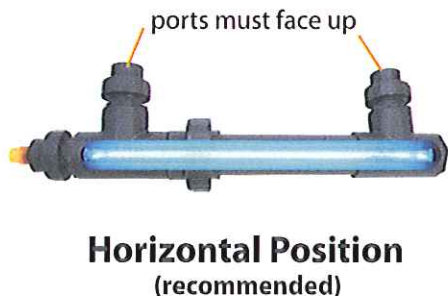

Vertical Position
(either port on top)



In the Horizontal position, the inlet and outlet ports must face upwards. The inlet and outlet ports are interchangeable. Proper positioning will reduce the chance of air becoming trapped in the housing.

In the Vertical position, the outlet or inlet port may be placed on top. Make sure the housing is securely mounted before operating. Large units may be secured with plumbing strap.

Optional Bypass

Some SpectraLight owners may wish to install a simple by-pass loop. A by-pass loop allows the owner to bypass the SpectraLight unit for service or for removal during freezing conditions. Alternatively, the quartz sleeve may be removed by using a winterizing cap and the unit drained during severe winters. A bypass is created by using two (2) three-way valves. An automatic air bleed system may be needed to relieve trapped air inside the housing. Failure to remove trapped air can result in damage to the housing.

Water Testing the SpectraLight Housing



Now that the SpectraLight housing is permanently mounted, it is time to perform water testing. This unit is rated up to 50 PSI. Although all units are quality tested from the factory, it is important to verify the unit remains leak free after shipping.


Water testing should always be conducted before the lamp is installed into the quartz sleeve and prior to connection of the power supply.

Using a standard household paper towel, roll up enough paper towel material to create a 3/4 inch x 12 inch "plug". Insert the paper towel log into the end of the open quartz sleeve. This is the end where the quartz sleeve exits the SpectraLight housing and where the orange cap is connected. Make sure the VisiPort cap is hand tightened. Turn on your pump and allow water to pass through the SpectraLight housing for at least 30 minutes. If you have an accessory that may increase water pressure, such as a pressure side pool cleaner, turn it on for at least 10 minutes, and test system for leaks while it is operating. Check the entire SpectraLight housing for leaks and verify there is no moisture on the paper towel plug.

If a water leak is found or if the paper towel plug has any moisture, the source of the water leak must be found and corrected. The source may be a broken or cracked quartz sleeve or a rubber o-ring failure.

If a leak is found during the leak test, turn off the pump to stop water flow and inspect the quartz sleeve by unthreading the Quick-release and removing the quartz sleeve. If the quartz sleeve is cracked or broken, contact SpectraLight for a replacement.

If the quartz sleeve is not the source of the leak, next inspect the double seal assembly. The double seal assembly consists of two stainless steel inserts, two EPDM o-rings, an orange VisiPort cap, and an internal grey retaining nut.

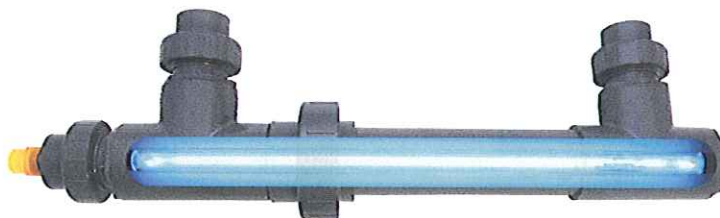

Safety First: SpectraLight housing must be water tested for leaks prior to use or anytime unit is disassembled and reassembled.

Power Supply/Ballast Installation



WARNING: Improper electrical connection of this equipment can result in electrocution. Consult with a qualified licensed electrician to ensure proper grounding with a ground fault circuit interrupter. Do not modify this product's plug or use any type of adapter with this product.



CAUTION: Do not operate SpectraLight UV Sterilizers for more than 2 minutes without water flowing through the UV housing. Dry operation will cause severe damage. The Power Supply must be wired so that the power supply/ballast on receives power when water is flowing through the SpectraLight Housing.

SAFETY FIRST: This unit must be connected to a properly grounded electrical circuit. This product requires both grounding and a ground fault circuit interrupter to reduce the risk of electrical shock.

The Power Supply Enclosure must be located near the SpectraLight housing. Approximately 6 feet of cord are provided between the Power Supply and the SpectraLight Housing. Do not attempt to lengthen this cord.

The electrical power requirement is marked on the unit's service/serial number tag. This requirement is either 120 volt 50/60 Hz or 230 volt 50/60 Hz.

The SpectraLight cord has a grounding conductor or a grounding type plug. The plug must be connected to an appropriate outlet that is properly grounded in accordance with all local codes and ordinances.

The NEMA enclosure should be securely mounted to a suitable surface prior to turning on or operation of unit.



SpectraLight recommends that our UV sterilizers are operated continuously for 24 hours per day, 7 days per week. The UV lamp can only be effective against pathogens when it is turned on. 12 hours of operation per day is considered a minimum run time for effective pathogen control.

A word about electrical power consumption. SpectraLight sterilizers will use only 15 - 25 cents per day when operated continuously (using average power rates). If you are concerned that operating your pump 24 hours per day will use too much electricity, you may want to investigate the energy efficient 2-speed and multi-speed pumps. These energy efficient pumps are designed to operate 24 hours per day while lowering power consumption up to 80% over traditional pumps.

If your SpectraLight does not operate continuously, a maximum of one on/off cycle is recommended per day. Additional on/off cycles will dramatically reduce the average life of UV lamps.

Lamp Installation



CAUTION: Do not look directly at the UV lamp when turned on outside of the housing. Do not allow the UV light to contact skin or eyes. UV light exposure can cause severe sunburn and/or conjunctivitis.

Please note that the UV light does not extend beyond the walls of the housing. As long as the UV lamp is contained in the housing, it is 100% safe.

Lamps and quartz sleeves must be handled with care. Do not touch the lamp with your fingers. If you accidentally touch the lamp, use denatured alcohol and a soft cloth to clean the lamp.

Provided water testing has been successfully completed, and the Power Supply has been securely mounted, the lamp(s) may be installed.

1. Carefully unpack the UV lamps being careful not to touch the glass section.
2. Carefully insert the lamp(s) into the quartz sleeve by inserting the non-connector end first. Insert the lamp into the quartz sleeve leaving 2-3 inches of lamp hanging out of the quartz sleeve.

Note: If you have chosen a vertical orientation, be careful not to allow the lamps to drop inside the quartz sleeve as this may break the quartz sleeve and the lamp.

3. Connect the the lamp power cords from the power supply to the lamp's electrical connector(s). Push the connectors together until they are flush and securely connected. Gently slide or lower lamp into the quartz sleeve.
4. Twist on grey power supply connector. Do not overtighten. Hand tighten only. This connection is not in contact with water.

The average life expectancy of the SpectraLight UV lamp is 12 months of continuous operation. Please note that the lamp may continue to emit light, but the UV output will diminish after 12 months.

Powering Up the Unit

First, turn your pump on so that water is flowing through the SpectraLight housing. Next, turn the power on going to the power supply.

The light from the UV lamp will illuminate SpectraLight's orange VisiPort. In direct sunlight, you may need to place your hands or a towel around the VisiPort cap to see the light. You may also check it at night. If no light is visible, have a qualified electrician confirm that proper input power is going to the lamp.

SpectraLight Maintenance



CAUTION: Always disconnect and unplug the unit from electricity before servicing SpectraLight.

Inspecting and Cleaning the Quartz Sleeve



Some swimming pools contain a high amount of calcium. The calcium level in swimming pools should ideally be maintained at 250 - 350 ppm. Under certain circumstances, calcium can cause a scale formation on all pool surfaces, including the SpectraLight quartz sleeve. This condition is rare but should be occasionally checked.

SpectraLight recommends monthly inspection of the quartz sleeve for the first 3 months. If no residue or build up is found, the inspection interval may be extended to once every 2-3 months.



CAUTION: Always follow manufacturer's safety instructions when using any chemical to clean quartz sleeve. Use of eye protection and gloves in a well ventilated area is recommended.

The entire SpectraLight housing is designed so that the quartz sleeve can be removed in less than 2 minutes with no tools.

1. Turn off your pump and unplug the unit
2. Remove the threaded grey power supply connector
3. Disconnect the lamp connector from the lamp
4. Carefully remove the lamp and place in a safe location (remember not to touch lamp glass)
5. Turn the Quick-release fitting counter-clockwise and carefully remove the quartz sleeve from housing.
6. Clean the quartz sleeve with muriatic acid (can be purchased at a hardware store or pool supply store).
Alternatively, you may use vinegar or Lime Away.
7. Thoroughly rinse quartz sleeve with clean water before reinstalling.

NOTE: If the quartz sleeve is damaged, replace sleeve by purchasing a new sleeve from SpectraLight.

Winterizing SpectraLight

Do not allow water to freeze inside the SpectraLight housing. When temperatures approach freezing, we recommend shutting the unit down and removing quartz sleeve and lamp. If you have installed a bypass loop, you may wish to remove the entire housing.

You may purchase a winterizing cap from SpectraLight which allows you to remove the quartz sleeve and plug the stainless steel double seal mechanism.

When returning the unit to service, we recommend replacing the o-rings.

Caution: It is important to water test the unit per our section on water testing each time you disassemble and reassemble SpectraLight.



NOTES:



WARRANTY

SpectraLight Ultraviolet warrants to the original purchaser, its Ultraviolet Sterilizers to be free from defects in workmanship or materials for a period of (1) year from the date of purchase on the power supply and all o-ring seals. SpectraLight extends a lifetime limited warranty on the UV sterilizer's PVC housing due to failure of the plastic from UV light exposure.

Waterleaks caused by failing to follow proper assembly & protection procedures void warranty. The UV lamp and the Quartz Sleeve are not warranted against breakage due to being made of glass. This warranty is only in effect provided that the equipment is installed in accordance with the factory instructions & recommendations & when operated within the environment and limitations for which it was designed. Should any of the integral parts of the unit become defective within their time constraints from the date of purchase, they will be repaired or replaced, if proven defective in workmanship or material in the opinion of the manufacturer, also not including damage by freezing or the reuse of gasket seals that are more than (12) months old.

Any costs incurred for the labor of removing the unit shall be the responsibility of the original purchaser, as will be all shipping charges to and from SpectraLight Ultraviolet factory. Damage or failure of any part of the UV Sterilizer covered by this warranty, which results from causes, directly or indirectly, connected with the installation, operation, environment, use or willful abuse, including, without limitation, improper packaging and damage incurred during shipping is not covered by this warranty. Otherwise, any implied warranties, which accompany the sale of these goods, are limited to their respective time constraints from the date of purchase. The manufacturer will only be responsible for the repair or replacement of any of its products or parts thereof that are found to be defective and will not bear the cost of any incidental or consequential damages arising out of the occurrence of such a defect.



NOTES:



SpectraLight Operating Manual

For Residential Ultraviolet Sterilizers

Save this manual.
Please read prior to use.



SAFETY INSTRUCTIONS - IMPORTANT INFORMATION

CAUTION: DO NOT VIEW BULB WHILE LAMP IS ON

DO NOT TURN LAMP ON DURING MAINTENANCE

PRECAUTIONARY STATEMENT: PROLONGUED DIRECT EYE AND SKIN EXPOSURE TO
THE UV LAMP IS HARMFUL.



NOTES:

Thank you for purchasing SpectraLight.

Please read the entire manual for best results.

You have taken the first step toward more enjoyable swimming and reduced pool maintenance. UV light is part of the electro-magnetic spectrum which is produced by the sun providing a powerful natural sterilizer.

UV systems are safe, simple to use and very reliable.

UV inactivates over 60 known pathogens, including algae, Cryptosporidium and E-Coli. In addition, UV has been proven to significantly reduce chloramines, or combined chlorine, a leading cause of water chemistry problems. Pool owners who make the move from traditional chlorine levels to UV save time, money, and are helping to protect our environment with an eco-friendly alternative to chlorine.

SpectraLight Compatibility

SpectraLight does not release any chemicals into the water. SpectraLight is compatible with all current methods of treating swimming pools. SpectraLight is compatible with chlorine, bromine, bromide base chemicals, salt pool systems, biguanide products and copper based algaecides.

SpectraLight and Chemicals

Please remember that SpectraLight dramatically lowers the dependence on chlorine and other residual sanitizers. SpectraLight owners may reduce the residual level of chlorine to only .5 ppm, about the level found in drinking water. SpectraLight does not eliminate the need for balancing pH, Alkalinity and Calcium Hardness. However, you will find that these parameters will become much more stable in SpectraLight pools. This means that once you achieve the desired level, the fluctuation should be minimal.

SpectraLight Startup Procedure

Step 1

- Vacuum and clean leaves and other debris from the swimming pool.
- Thoroughly brush the walls of the pool
- Clean your pump strainer basket and pool skimmers
- Clean and backwash filters

Step 2

Balance pool water to the following parameters:

pH	7.4 - 7.6
Total alkalinity	80 - 150 ppm
Calcium hardness	200 - 400 ppm

To lower pH - add pH decreaser
To raise pH - add pH increaser
To raise calcium hardness - add a calcium hardness increaser
To decrease calcium hardness- dilute the water with fresh water
To raise total alkalinity - add an alkalinity increaser
To lower total alkalinity - add acid

Step 3

Turn on SpectraLight and operate SpectraLight and your pump for 72 hours. Maintain a chlorine residual of 2.0 ppm during this time.

Step 4

After SpectraLight has been operating for 24 hours, brush the pool walls and then Superchlorinate (shock) pool a to burn off any final contaminants that may be attached to the wall of the swimming pool. Do not enter the pool until chlorine has fallen below 3 ppm.

Did you Know?

UV is the most powerful method of treating pool water. In fact, UV has been called the gold standard. However, the water must pass through the UV sterilizer chamber before it can be treated. UV does not destroy pathogens that are attached to the wall of the pool until they are dislodged so they can pass through the chamber. This is why a low residual of chlorine or other sanitizer is required with UV. UV oxidizes any organic matter that passes through the chamber and frees up bound chlorine. This is precisely why a low level of chlorine is so effective when combined with UV.

Step 5

Allow chlorine to naturally drop to 0.5 ppm. Now you may decrease the filtration/circulation time to a minimum of 12 hours. Of course, 24 hour circulation is best for all swimming pools.

Did you Know?

Over 70% of pools have pumps which are too large for the filter and/or pipe diameter. Improper pump and pipe sizing causes wasted electricity and reduced flow rate. Too often, pool designers and builders fail to explain that bigger is not better when it comes to pool pumps. A poorly sized pool pump can consume as much as all other household appliances combined - sometimes in excess of \$1,000.

The good news is the newer pumps feature more efficient 2-speed and multi-speed motors that move water much slower. These pumps usually operate 24 hours at a much lower speed. It takes far less electricity to move water slower. There is less backpressure from the filter, pipe, and accessories. Reducing the speed of the water flow by 50%, cuts power use by about 85%. The other benefits from reduced water flow is the water will stay in your UV chamber longer, dramatically increasing the UV dosage applied to the passing water.